
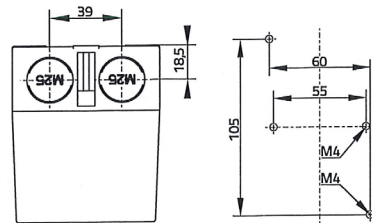


Manual Motor Starters

LP~~LR~~

MU25

Moulded Enclosure
MU25-O55

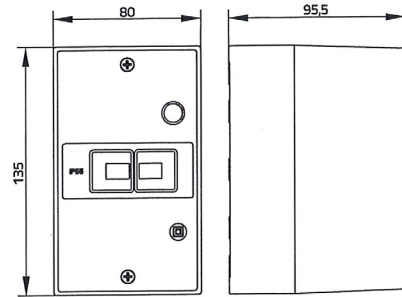

Moulded Front Plate
MU25-C55

7FSHD~~LR~~PS~~LR~~

In case of higher ambient temperature use the following formula: $(\text{Ambient temperature} - 20) \times 0,3 = \text{correction factor}$ in % of the full load motor current

Example:
Ambient temperature 60°C, full load motor current 5A $(60 - 20) \times 0,3 = 12\%$

7ULSSL~~LR~~DUDF~~LR~~VLF

Mounting
with clamps

with screws